

## Fitment Instructions L.R. 110

## Packing list:

1\*rack bed 2\*side rails 1\*rear rail - the curved one 4 of 50 \* 25mm cross members 2\*leg sets/gutter support rails

1\* part box

#### **Contents of Parts Box**

8\*stainless u channel brackets - with Hannibal elephant

-fitted with 32 sets 6mm\*12mm nuts, washers and dome nuts and 2 sets 6\*15mm for the front attachment point of the top rail.

8 of 8mm nyloc nuts 8 of 8mm flat washers 8 of 8\*40mm bolts 16 of 8m spring washers 8 of 8mm nuts

8 \* 1.2m sections adhesive foam rubber


2 \* sections 2.4m gutter rubber u - channel

8 \* gutter clamps

8 \* self adhesive clamp foam.

1 \* no 2 allen key for grub screws.

# Top Rail assembly:

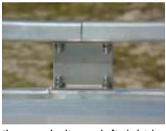

- 1. Slide firstly 1 of the 6.15mm, then 6 of 6\*12mm bolts into each channel on the top of the tubing on the sides on the rack. The very first one, slide all the way forward this will be used to fasten the front of the top rail to the rack at a later stage.
- 2. Slide 4 of 6\*12's into the underside of each top rail, as well as the back curved one.
- 3. Attach 3 stainless u channels to both sides of the rack the back one should be positioned so that it overlaps with half of the rear rail, and half on the side rail position the join in the middle. Position the front one midway between the rear and the front of the side rail. Mount the side rail on top of these plates, bolting the front down with

the one bolt you left right in the front of the rack. Tighten all in place(keep loose for minor adjustment), repeat for back rail and other side rail.

4. Tighten all nuts

#### Fitment:

- 1. Remove rack from carton
- 2. Turn bed upside down.
- Attach u channel rubber to leg sections/gutter support rails.
- 4. Locate four 50\*25mm tubings on the slotted solid bar of the leg sections.





5. Attach self adhesive foam on the 50\*25 tubings between the leg sections.

 Turn tubings and leg section upside down and fit into corresponding channels on underside of bed. Align legs and bolt loosely together using the eight 8mm bolts, nuts and washers (washers top and bottom).





7. Turn rack over. Fit top rail as per top rail fitment instruction.

- 7. Using four persons, lift rack onto vehicle. Adjust width of gutter rail by pulling outward or pushing inward as required.
- 8. Align rack with rear of vehicle.
- 9. Attach clamp foam to clamps and position clamps in clamp blocks. Attach 8mm flat washers and nuts and hand tighten. Hand-tighten clamp block grub screws.
- 10. Tighten 8mm clamp nuts taking care not to over-tighten and distort clamp or gutter channel. Maintain pressure, (by hand) to keep clamp flush against gutter rail whilst tightening. Tighten grub screw.
- 11. Tighten 8mm bolts.
- 12. Finally check all nuts and bolts for fastness.

#### **Ladder Parts List:**

- 1 \* ladder
- 1\* 8mm nut and flat washer
- 1\* grub screw
- 1\* clamp
- 2 of 6\*30mm bolts
- 4 of 6mm flat washers
- 2 of 6mm nyloc nuts

- 1 bottom step
- 2 of 8\*40mm bolts
- 4 of 8mm flat washers
- 2 of 8mm nyloc nuts
- 1 aluminium spacer
- 2 of 6\*15mm countersunk bolts
- 2 of 6mm flat washers
- 2 of 6mm nyloc nuts

## **Ladder Fitting Instructions**

- 1. Place ladder section on gutter to the left of rear door.
- 2. Insert gutter clamp, attach 8mm nut and washers. Hand tighten 8mm nut and grub screw.
- 3. Remove inner panelling opposite pre-drilled 6.5mm holes on ladder section.
- 4. Ensure ladder is straight and mark through pre-drilled holes onto bodywork. Remove ladder and drill marks with 6.5mm bit through bodywork.
- 5. Place ladder back in position, hand tighten clamp and grub screw, place 6mm bolts through holes, add washers and nuts and tighten.
- 6. Tighten clamp and grub screw.

## **Step Fitment Instructions**

- 1. Remove two chassis mount bolts (8mm).
- Attach step with supplied 8mm bolts, nuts and washers use aluminium spacer to ensure flush mount if required.
- 3. Tighten 8mm bolts.

### **Important:**

Check all nuts and bolts periodically to ensure non have loosened.